



*A Complete System in Circuit Protection*



# 415V BUSBAR SYSTEM METALCLAD DISTRIBUTION BOARD

**UTAMA** (416650-H)  
**SWITCHGEAR SDN BHD**

website : [www.ussbeps.com](http://www.ussbeps.com)


No.3, Jalan USJ 19/4A, USJ 19,  
47630 Subang Jaya, Selangor Darul Ehsan.

TEL : 603-8024 1215 / 1216


FAX : 603-8024 1796

email : [utamasb@ussbeps.com](mailto:utamasb@ussbeps.com)


# 415V BUSBAR SYSTEM METALCLAD DISTRIBUTION BOARD

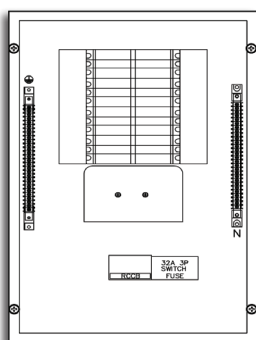


SWITCH INCOMER

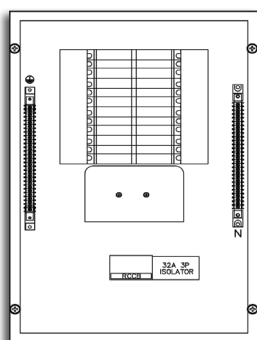


ISOLATOR INCOMER

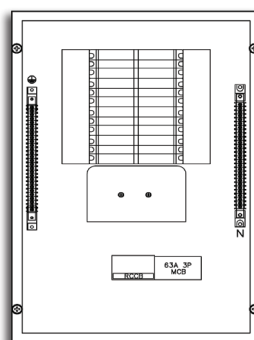


MCB INCOMER

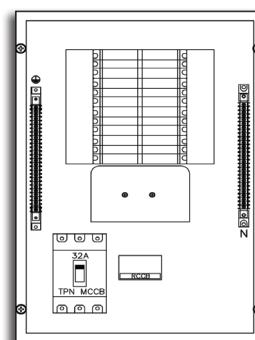


MCCB INCOMER

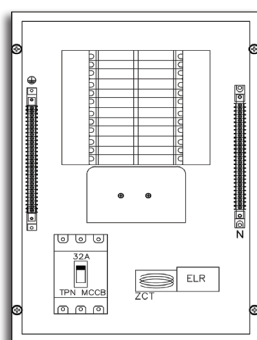

MCCB & ELR INCOMER

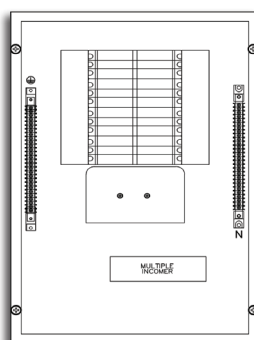

PROVISION FOR MULTIPLE INCOMER

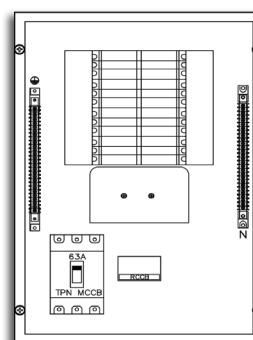

PROVISION FOR MCCB & RCCB INCOMER

REFERENCE CODE	DESCRIPTION OF INCOMER
1) SR 32	Fitted with 32A 3P Switchfuse & Provision for RCCB
2) SR 63	Fitted with 63A 3P Switchfuse & Provision for RCCB
3) SR 100	Fitted with 100A 3P Switchfuse & Provision for RCCB
4) IR 32	Fitted with 32A 3P Isolator & Provision for RCCB
5) IR 63	Fitted with 63A 3P Isolator & Provision for RCCB
6) IR 100	Fitted with 100A 3P Isolator & Provision for RCCB
7) AR 32	Fitted with 32A 3P 25KA MCCB & Provision for RCCB
8) AR 63	Fitted with 63A 3P 25KA MCCB & Provision for RCCB
9) AR 100	Fitted with 100A 3P 25KA MCCB & Provision for RCCB
10) AE 32	Fitted with 32A 3P 25KA MCCB c/w Earth Leakage Relay
11) AE 63	Fitted with 63A 3P 25KA MCCB c/w Earth Leakage Relay
12) AE 100	Fitted with 100A 3P 25KA MCCB c/w Earth Leakage Relay
13) MR 32	Fitted with 32A 3P 6KA MCB c/w Provision for RCCB
14) MR 63	Fitted with 63A 3P 6KA MCB c/w Provision for RCCB
15) PM 63	Provision for Multiple Incomer up to 63A
16) PAR 63	Provision for MCCB & RCCB Incomer up to 63A
17) PAR 100	Provision for MCCB & RCCB Incomer up to 100A

TP WAY	DIMENSION (MM)		
	W	H	D
4 WAY	420	520	110
6 WAY	420	574	110
8 WAY	420	628	110
10 WAY	420	736	110
12 WAY	420	736	110
14 WAY	420	844	110
16 WAY	420	844	110
18 WAY	470	952	110
20 WAY	470	952	110